



CATALOGUE OF CONVERSION PARTS FOR THE VAN CONVERSION



🌐 ICOR.BE

| ✉ sales@icor.be

| ☎ +32 (0)10 23 95 20



Extensive catalogue of conversion parts for the van conversion market, whether you are converting a van to a camper or just converting your work van to a day van.



We have in our range, for the VW T5 and T6, side sliding door steps (extra high, with and without light) and extra wide and extra deep rear threshold steps with plugs, edge trims in various widths for the installation of the side and rear windows. Door seals, boot seals and pop-top roof seal on rolls of 50 m.

Complementary we also have the unique Window Pods® camper van blinds system from Vanshades for the models VW T5 and T6.



STEPS AND THRESHOLD COVERS

8579SXHVRDABS Black high-quality side loading doorstep (suitable for the left and right side) for the VW Transporter T5 and T6. This doorstep is for the 85 mm extra deep step with and without light, it works for converting vans to campers.



8579SXHVRD

110 x 21cm

(This step does not fit in place of the 100mm step, in combination with the sliding seat rails)



8579BXHV

126 x 15,5cm

8579BXHV ABS Black high-quality rear threshold step for the VW Transporter T5 and T6 with twin doors (Barn Doors), extra-long and deep, includes the caps for the screw holes.


8579BXHV1H ABS Black high-quality rear threshold step for the VW Transporter T5 and T6 with tailgate, extra-long and deep, includes the caps for the screw holes.



8579BXHV1H

126 x15,5cm

DOOR SEALS AND BOOT SEAL

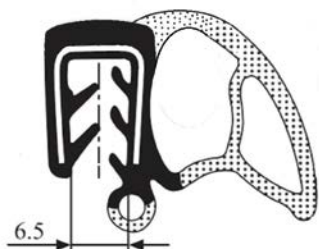


BRS2462

BRS 2462 Seal for the VW Transporter T5-T6 side sliding door.


Comes on a 50 m roll and will require trimming.

BRS2416 Seal for the VW Transporter T5 and T6 Front Door and Side Loading Door (California/Caravelle type slider).

Comes on a 50 m roll and will require trimming.

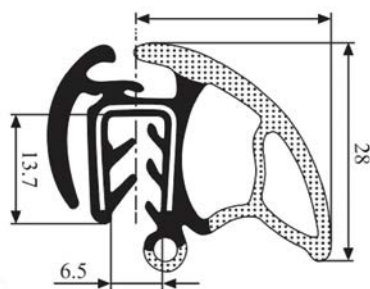

BRS2416

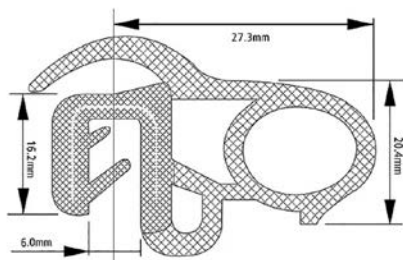


BRS2396

BRS2396 Seal for the VW Transporter T4 sliding door, fits all models.


Comes on a 50 m roll and will require trimming.

BRS2343 Seal for the VW Transporter T4 rear boot , fits either on barn doors or tailgates.

Comes on a 50 m roll and will require trimming.

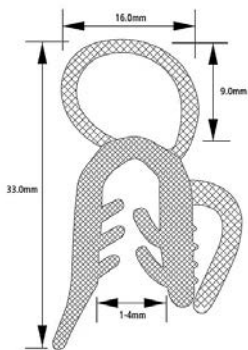

BRS2343

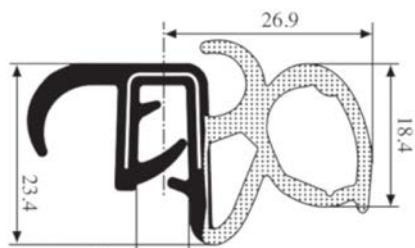

BRS2439 Seal for the VW Transporter T4 front door.


Comes on a 50 m roll and will require trimming.

BRS2439


POPTOP SEALS

BRS4001 Seal for the VW Transporter T5-T6 poptop edge, goes on up to 5 mm sheet thicknesses.

Comes on a 50 m roll and will require trimming.

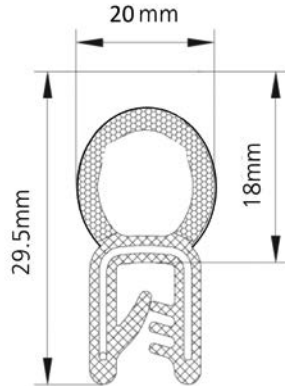

BRS4001

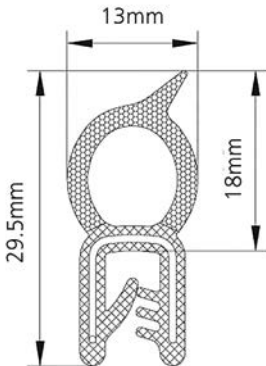

BRS1723


BRS1723 Seal for the VW Transporter T5-T6 poptop edge, goes on up to a 3mm thicknesses.

Comes on a 50m roll and will require trimming.


EDGE TRIMS

BRS2355 SELF GRIP PVC «U» knock on edge trim for twin panels, for 10 to 12mm panel thicknesses. Suitable for the VW Transporter T5 and T6.

Comes on a 100 m roll.

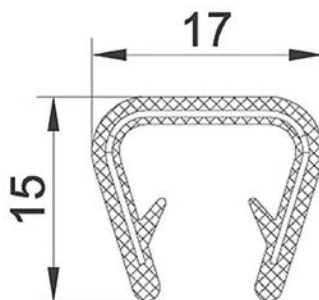

BRS2355

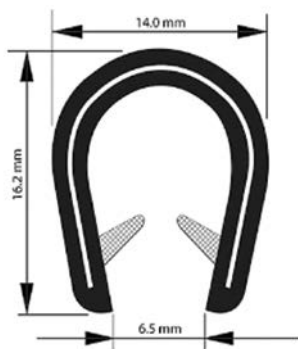


BRS2428

BRS2428 PVC/STEEL CARRIER edge trim, for 6-8mm panel thicknesses. It is commonly used for Vivaro's and Sprinters window conversions.

Comes on a 50 m roll.


BRS2368 SELF GRIP PVC «U» Universal Edge trim, for 1.5mm panel thicknesses. For converting VW T4, Nissan's, Transits etc.

Comes on a 50 m roll.

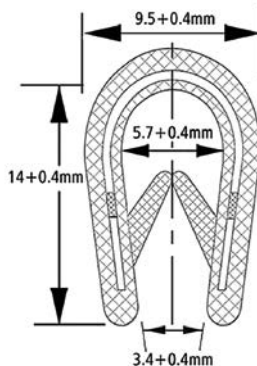

BRS2368

EDGE TRIMS

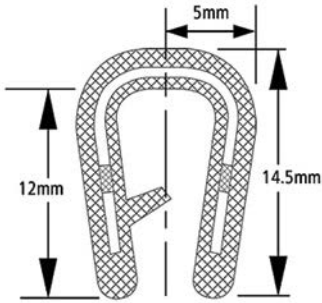


BRS2205

BRS2205 EDGE TRIM BLACK PVC FLEXIBLE GRIP PROFILE Universal Edge trim for converting VW T4, Nissan's, Transits etc. Only one inside lip, so you can bond the glass tighter to the aperture.


Comes on a 50 m roll.

BRS2177 BLACK PVC FLEXIBLE GRIP PROFILE- small edge trim for 1mm panels.

Comes on a 50 m roll.

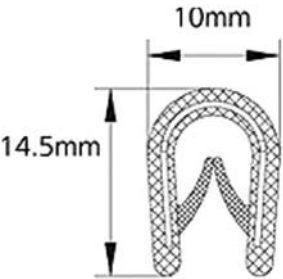

BRS2177

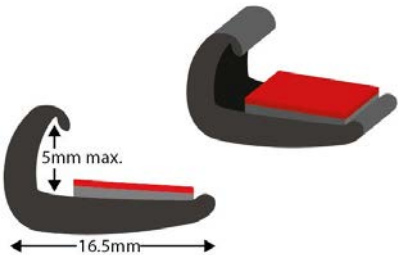

BRS4002

Universal Glass Edge trim, to hide the gab between rear and centre glass.

Comes on a 25m roll.

BETASEAL™ - 1527 - KIT FROM DUPONT™ REF: PUM400K060P



**A fast and safe bonding concept in OE-Quality,
from the pioneer in car window bonding**

- ✓ Cold processable, medium viscous, high modulus and fast curing bonding adhesive
- ✓ Compatible with all car makes
- ✓ Good bead stability- predictable, easy and clean work
- ✓ Non-conductive urethane reduces interference with radio, mobile phone, GPS or additional driver aid technologies
- ✓ 60-minute drive away in temperatures from -10°C to 40°C
- ✓ Wet-on-wet no shake primer technology for even faster and easier fitting
- ✓ OEM approved
- ✓ Supplied in kit* form with 12x 400ml sausages, primer, nozzles and cleaning sponges



*Also available in other packagings, volumes and drive-away-time variations

VanShades WindowPod



Blind and thermal Systems from Vanshades

The Vanshades Original Window Pod® systems are focusing on the window conversion of VW T5 T6 with blinds and thermal systems.

Original Window Pod®

This VW T5 and T6 window blinds system is an easy to install, pre-assembled blind and frame system, which offers stylish privacy for all windows of your VW T5 or T6 Campervan.

A tasteful alternative to curtains, Window Pods® achieve a flawless modern finish to your windows and conversion whilst offering blackout and thermal qualities. Available in both Pleated/Blackout and Thermal-Cellular/Blackout types, our easy to install Window Pod® system is suitable for use at conversion stage, or to retro fit to existing conversions.



Cellular Thermal/Blackout Features :

The foil lined cellular pleated structure of our thermal blinds have been created to give a modern sleek look.

The cellular design holds a layer of air which acts as an insulator, retaining heat in the winter and keeping your vehicle cool in the summer. For long and short wheel base, carpeted or plain, for aftermarket glass or factory original.

Options Available



Duo: The Duo blind is a durable pleated mesh fly screen that is fixed into the Window Pod®, along with your thermal blackout blind.

The Duo is located at the bottom of the frame and can be operated independently of each other.

The Duo screen is black in colour and like the blind it is completely out of sight when not in use.

Carpet variants for frames



Our newest SPECTRUM Signature line offers a selection of window pod frames with a soft, rubberized and matte finish in 212 RAL colors.



Tailgate Chair Pod For VW T5, T6 & Ford Custom

Through our experiences with previous versions of the Chair Pod, we have improved our design. Rather than a canvas fabric bag, the new and improved Chair Pod is now a vacuum formed plastic container which will comfortably fit two Vanshades branded camping chairs.



The box takes up as little as 110mm at the rear of the vehicle and features a magnetic lid and rubber live hinge for ease of storage and access, we have formed the product in light grey plastic to match the VW trims on the pillars of the Transporter. The Chair Pod can be fully installed in as little as 10 minutes.

LOC8 TABLE SYSTEM :

An integrated table for VW T5 & T6 Vans.

Innovative camper solution "Loc8 Table System" Table and trim to fit VW T5 and T6 Transporter



**Fed up of having a loose table rattling around your van?
Fed up of having a table that is fixed in the wrong place?**

At last the answer is here with the Loc8 Table System.



**It's a simple and effective way to
have the best of both worlds:**

A standalone camping table that's securely stored in your sliding door when not in use. Designed and assembled in Britain, the Loc8 Table system is fitted in minutes and requires absolutely no modification to your sliding door.

There is no cutting away of strengthening beams and no alteration of your existing lock mechanisms; you simply remove the existing VW trim and replace it with the Loc8 Trim, reusing the existing trim clips.

LOC8 table system fixed in the side sliding door of the VW T5/T6; table safely stored away in the trim. The Loc8 Table system fits into the nearside sliding door of all Right Hand Drive VW T5 and T6 models manufactured from 2004 onwards.

The system is suitable for use in both SWB and LWB models with or without a power operated door.



🌐 ICOR.BE

| ✉ sales@icor.be

| ☎ +32 (0)10 23 95 20